

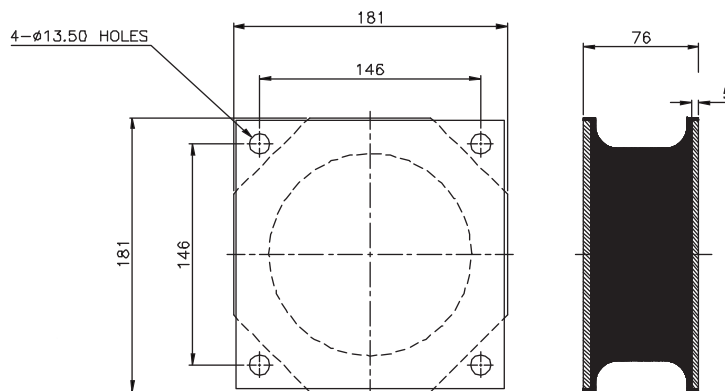
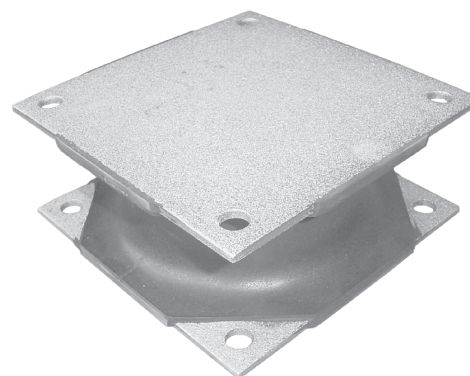


MOUNTS AND SHOCK ABSORBERS FOR OFF THE ROAD VEHICLES



P-0105 / Ingersol RSGD / RNH / VOLVO

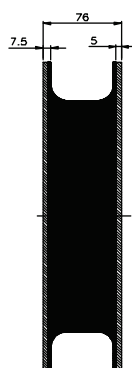

P-2610


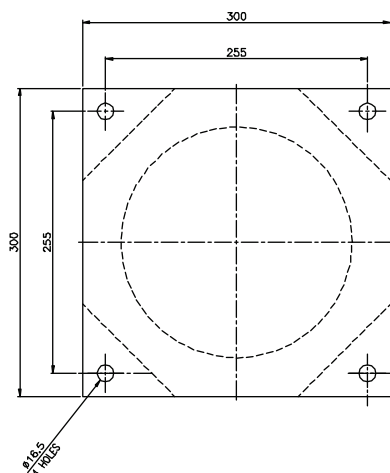


P-2799 (Hamm / Wirtgon)

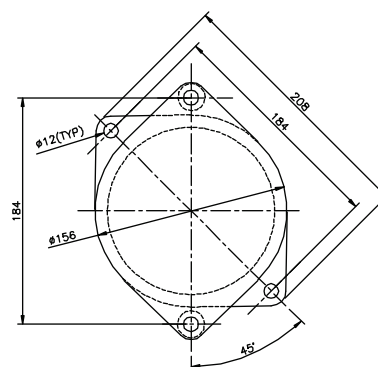
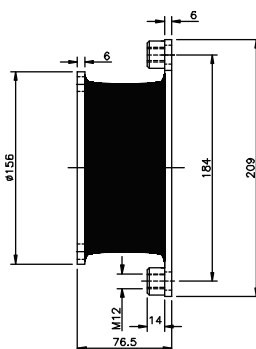


DRUM MOUNT



P-0859 (Ammann, Vibromax)

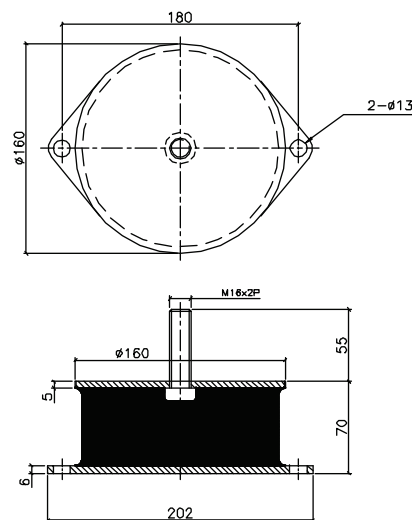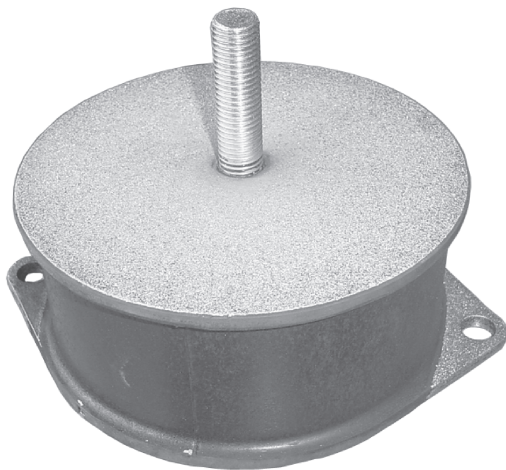

P-0908 (Bomag, Panell)

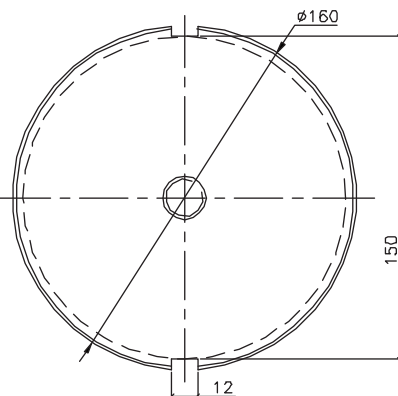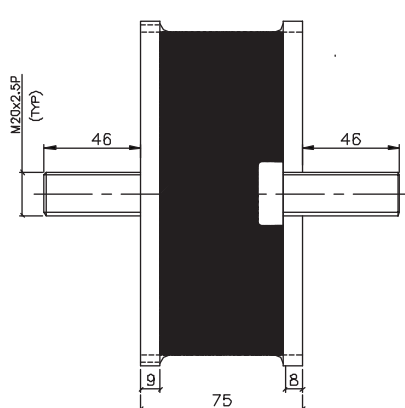


P-1792 (Hamm)

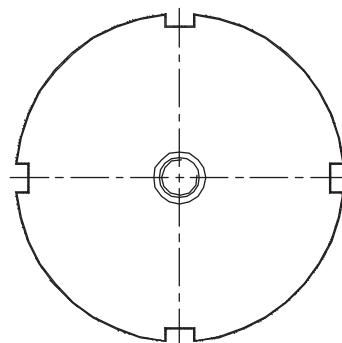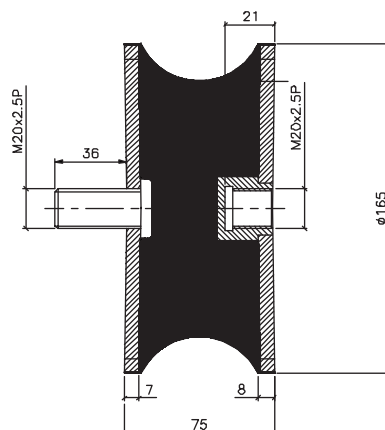


DRUM MOUNT

**P-2731 (Ammann /
Vibromax / CNH)**

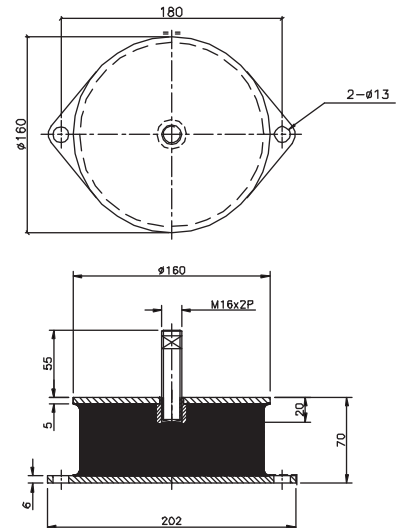

P-1791 (Hamm)

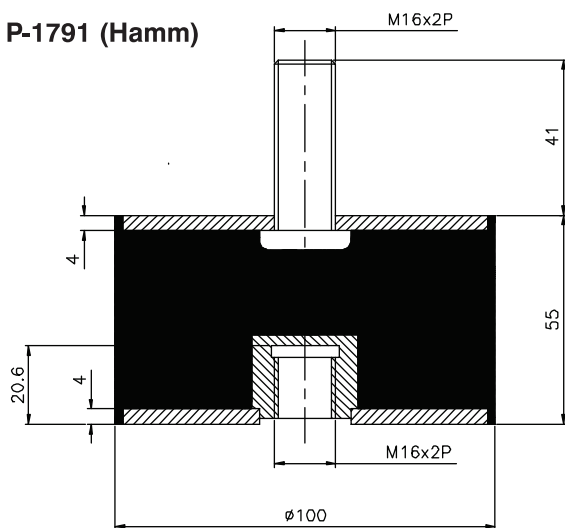

P-0910 (Bomag, Panell)

